

SUPPLEMENT TO 1972 TRACTOR PARTS LIST

COVERING 1973 AUTOMATIC TRANSMISSION MODELS

September 29, 1972

ITEM NO.	PART NO.	DESCRIPTION	MODEL APPLICATION	NO. REQ'D.
<u>4.050 HYDROGEAR (PLATE 4.4)</u>				
4-	102613	Fitting-Hyd. Hose to Hydro.	16 HP	1
4-77	103109	Cone-Imp. Relief Valve-Hydro.	16 HP	1
4-78	103110	Spring Imp. Rel. Valve-Hydro.	16 HP	1
<u>5.000 FRONT AXLE AND STEERING (PLATE 5.1)</u>				
5-39	102715	Wheel-Steering	All	1
5-44	102856	Insert-Steering Wheel	All	1
<u>6.050 BRAKE CLUTCH SPEED CONTROL LINKAGE (PLATE 6.5)</u>				
6-20	102747	Pedal-Neutral	All	1
6-50	103053	Control Assy.	All	1
6-	103051	Rod-Speed Control	All	1
6-	103087	Spring-Neutral	All	1
6-	933179	Roll Pin (spring guide)	All	1
6-	933165	Roll Pin (rod to control)	All	1
6-51	102891	Knob-Speed Control	All	1
6-	915238-4	Nut	All	1
<u>7.000 HITCH ASSEMBLY (PLATE 7.1)</u>				
7-01	102639	Latch Assembly-Mid Hitch	All	1
7-02, 7-03	102644	Plate	All	2
7-	102672	Rod-Lock	All	1
7-	101017	Lock	All	1
7-	102870	Support	10 HP	1
7-13	101741*	Latch Assembly-Front Hitch	All	1
7-14	101750*	Rod-Latch Pivot	All	1
7-15	101751*	Rod-Lock	All	1
7-16	101707*	Lock	All	1
7-17	8616*	Spring	All	1
7-18	3680*	Cap	All	1
7-56	102373*	Lift Bar Assembly	All	1
7-57	6229*	Bearing	All	1
7-58	102385*	Lift Rod	All	1
7-59	6739*	Trunion-Lift Rod	All	1
7-	102797	Plug-Dial-a-Height anti-rattle	All	1
<u>8.000 SHEET METAL &amp; COVERS (PLATE 8.1)</u>				
8-30	102800	Hood Stand	All	1
8-	102810	Channel-Wire Support	All	1
8-40	102864	Panel-Dash	All	1
8-	935109-4	Plug Button-Lighter	All	1
8-	935090-4	Plug Button	All	1
8-91	102798	Foot Rest R.H.	All	1
8-	102799	Foot Rest L.H.	All	1
8-	102788	Pad-Foot Rest R.H.	All	1
8-	102789	Pad-Foot Rest L.H.	All	1
<u>10.000 FUEL &amp; EXHAUST SYSTEMS (PLATE 10.1)</u>				
10-	943151	Reducer 1 1/4 to 1	16 HP	1
10-	102265	Nipple-Engine	16 HP	1

\*Illustrated in 800 Com. Parts Book.

SUPPLEMENT TO 1972 TRACTOR PARTS LIST  
COVERING 1973 AUTOMATIC TRANSMISSION MODELS

ITEM NO.	PART NO.	DESCRIPTION	MODEL APPLICATION	NO. REQ'D.
<u>11.000 ELECTRICAL SYSTEM (PLATE 11.1)</u>				
11-14	103137	Harness-Wiring-Lights	All	1
11-	938007	Bushing-Insulator-Tail light wire	All	1
11-10	102957	Fused Connector Assy.	All	1
11-	103060	Wire Assembly	10 HP	1
11-	102963	Wire Assembly ign. switch to cl. switch	All except 10 auto.	1
<u>13.000 WHEEL &amp; TIRE ASSY. (PLATE 13.1)</u>				
13-02	102785	Wheel & Tire Assy.	16 HP	1
13-06	102786	Tire (23 x 9.50 x 12)	16 HP	1
<u>14.000 PTO Clutch (Plate 14.1)</u>				
14-	102944	Clutch Lever Assembly	10 HP	1
14-	102964	Spacer	10 HP	1
14-	9038	Grip Lever	10 HP	1
14-	102872	Shaft-Clutch	10 HP	1
14-	102938	Rod-Housing (Yoke)	10 HP	1
14-	102941	Clevis-Shaft	10 HP	1
14-	102956	Pin-Clevis (Special)	10 HP	1
14-	103078	Bracket Assembly	10 HP	1
14-	102943	Plate	10 HP	1
14-	102704	Spacer	10 HP	1
14-	102809	Nut-Flanged	10 HP	1
14-	102937	Rod-Clutch	10 HP	1
14-	101161	Trunion	10 HP	1
14-	1230	Spring	10 HP	1
<u>15.000 SEATS DECALS-TRIM (PLATE 15.1)</u>				
15-02	102033	Seat Base Assy.	All except 10 HP	1
15-20	102831	Decal-Hood	All	2
15-23	103023	Decal-10 HP Auto.	10 HP	2
15-23	103022	Decal-12 HP Auto.	12 HP	2
15-23	103021	Decal 14 HP Auto.	14 HP	2
15-23	103020	Decal 16 HP Auto.	16 HP	2
15-	102844	Decal-Read Operators Manual	All	1
15-	102846	Decal-Speed Control Knob	All	1
15-	102948	Decal-Hand Lift	All	1
15-	102859	Decal-PTO Clutch Knob	10 HP	1