


WHEEL WEIGHTS WW-93

ASSEMBLY

- Unscrew two of the four rear wheel bolts.
 The two bolts on each side of the hub set screw should be removed first.
- Place one weight on inside of wheel as shown at right, fasten securely with bolts, washers and nuts.
- 3. Unscrew the remaining two bolts and fasten another weight in place.
- 4. Repeat these steps on opposite wheel.

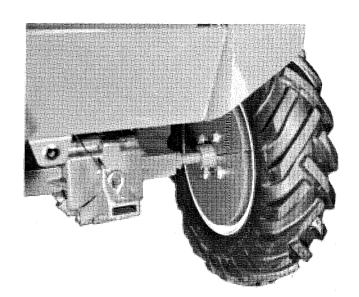

PARTS LIST

When ordering parts always list Part No. and name of part.

Description	No. Req'd
Weight (44 lb.)	4
Bolt — Hex. %6-18 x 4" (Special)	8
Nut %-18 (Wheel Lock)	8
Washer % S.A.E.	8
	Weight (44 lb.) Bolt — Hex. ½6-18 x 4" (Special) Nut ½6-18 (Wheel Lock)

