

Wheel Horse®



KIT 6040

(Converts LMR 3072 to LMR 303)

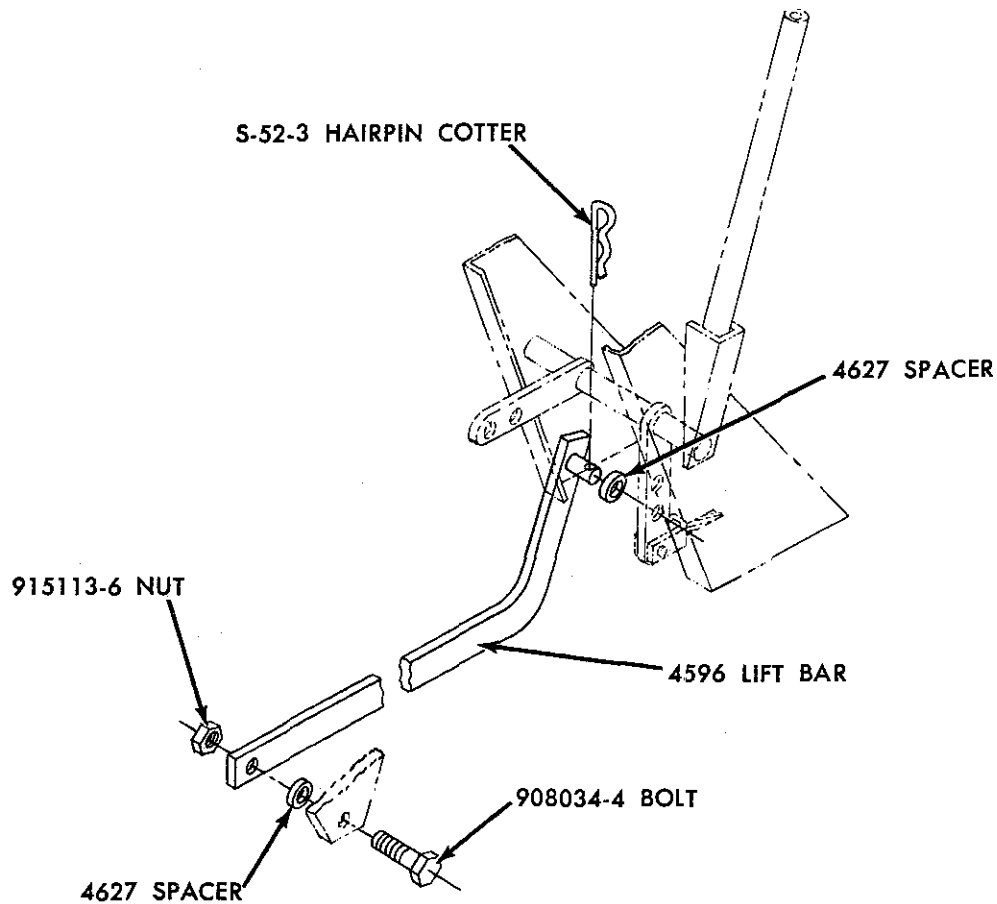


FIG. 1

Place spacer, Part No. 4627 on lift bar, Part No. 4596. Insert lift bar into middle hole in tractor lift assembly as shown in Fig. 1. Secure with hair pin cotter, Part No. S-52-3.

Fasten the other end of the lift bar to the lift assembly on the front reel mower using the spacer, Part No. 4627, the 3/8" x 1" bolt, Part No. 908034-4 and the 3/8" nylock nut, Part No. 915113-6.

PARTS LIST

Ref. No.	Part No.	Description	No. Req'd.
1	4596	Ass'y. Lift Bar	1
2	4627	Spacer	2
3	908034-4	Bolt — Hex 3/8-16 x 1	1
4	915113-6	Nut — Nylock 3/8-16	1
5	S-52-3	Hairpin Cotter	1