


PARTS LIST AND INSTRUCTIONS

MID-MOUNTED GRADER BLADE

FACTORY ORDER NUMBER 7-1114

(Formerly 7-1113)

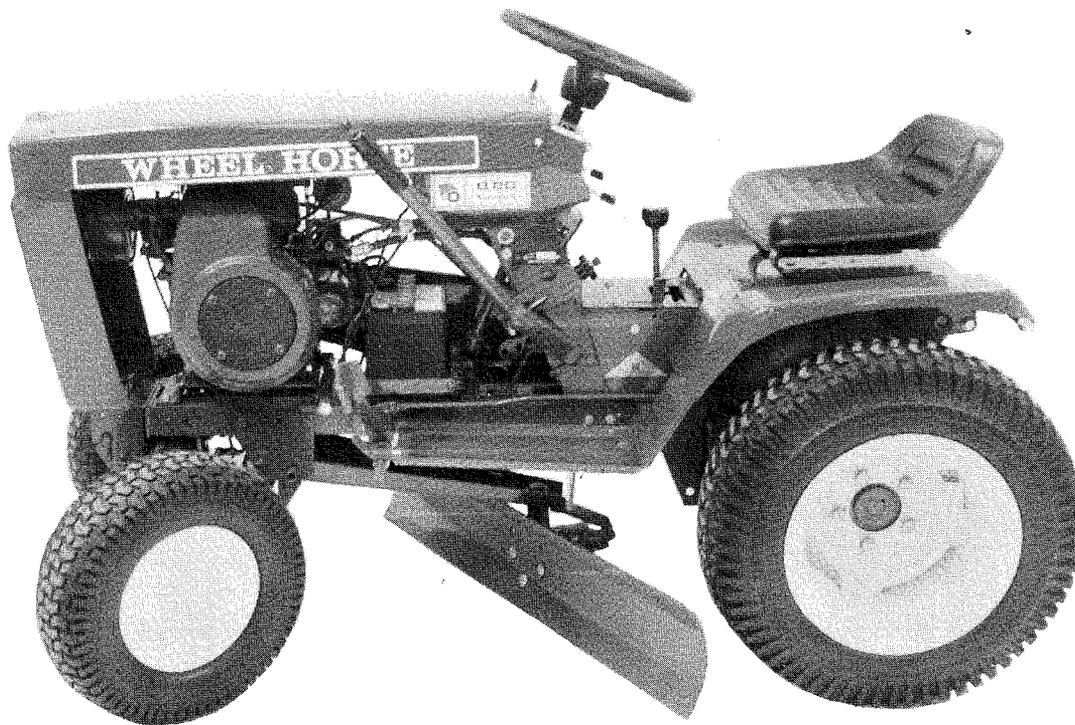

DESCRIPTION:

The Blade is shipped complete in one carton. There are three (3) main parts in the carton: The Blade Assembly, Frame Assembly, and Hardware Package. The grader blade is mounted into the mid-mount hitch.

ASSEMBLY:

1. Remove contents from carton and place on a clean flat surface.
2. Grease the shaft of the blade support, part 8838, and insert it into the tube in the frame assembly, part 8835, and secure with the "E" Ring.
3. Insert the small pin of the lift link into the lift lug of the frame. Secure with a hairpin cotter.

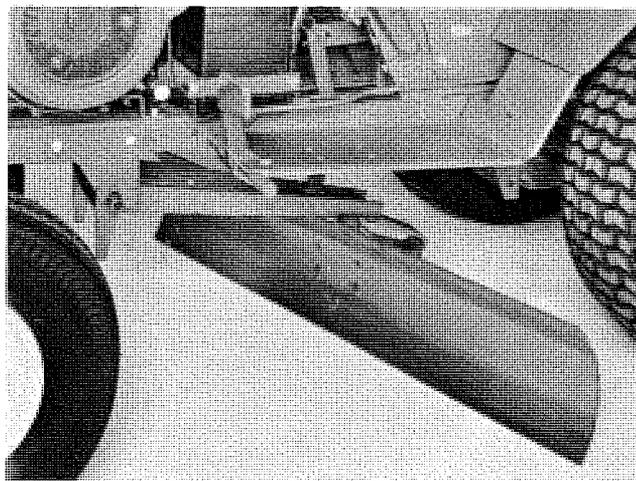


FIGURE 1



WHEEL HORSE

lawn & garden tractors

MOUNTING:

1. Turn the tractor wheels to the left and slide the unit under the tractor from the right side.
2. Place the frame cross shaft into the hitch grooves and close latch. See Figure 1.
3. If the older style hitch is used, place a hairpin cotter into the hole on the left hitch plate to keep the latch from backing off. Tach-a-matic hitches starting with 1973 models are self locking.
4. Insert the large pin of the lift link through the end hole of the tractor upper lift arm.
5. Secure with the hairpin cotter.

OPERATION:

The blade is adjustable and may be locked in three different positions: Straight, right angle, and left angle. These adjustments are made by pulling up on the angle adjusting rod (located at the rear of the Frame Assembly) and then turning the blade by hand right or left, now release the rod which will lock blade into position. Down pressure should be applied by pushing down on tractor Lift Lever. (**Caution: Do Not Use Feet to Put Down Pressure on Blade.**)

Light weight oil should be applied to all moving parts before operation and after every 10 hours of use, also grease after every 10 hours of use.

Caution: Avoid hitting solid objects with blade.

PARTS LIST — MID-MOUNTED GRADER BLADE

FACTORY ORDER NUMBER 7-1114


(FORMERLY 7-1113)


Parts available only through Authorized Dealers.

When ordering parts always list Part No. and Description.

(Specifications subject to change without notice.)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	8835	Frame Assembly	1
2	8838	Blade Support	1
3	101905	Rod — Angle Adjustment	1
4	6532	Bracket	2
5	905054	Screw $\frac{1}{4}$ -20 x $\frac{5}{8}$ Mach. Rd. Hd. Slotted	4
6	915661	Nut — $\frac{1}{4}$ -20 Elastic Stop	4
7	920205	Washer	4
8	933154	Roll Pin	1
9	5680	Blade	1
10	900063	Carriage Bolt $\frac{3}{8}$ -16 x 1	3
11	915663	Nut $\frac{3}{8}$ -16 Elastic Stop	3
13	932962	Pin	1
14	933504	Hairpin Cotter	2
15	1030	Grease Fitting	1
16	5700	"E" Ring 1" Shaft	1
17	103174	Decal Attachment	1
18	103161	Decal Safety First	1
19	104357	Lift Link — Horizontal Engine Shaft Tractor	1

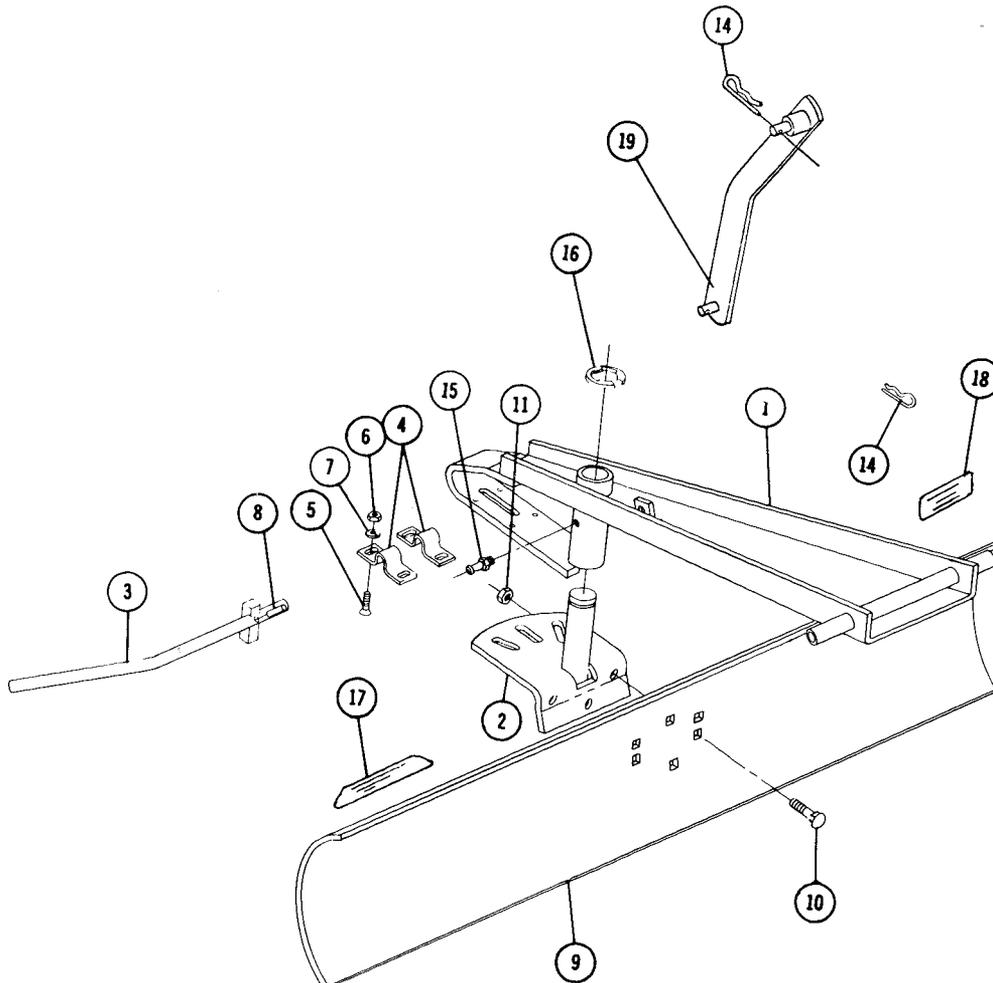

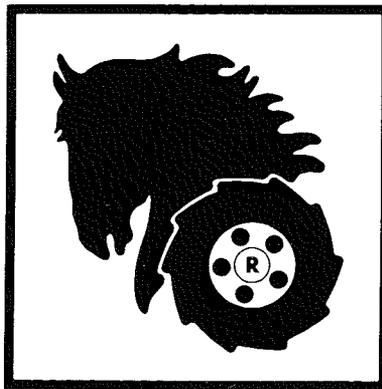

WHEEL HORSE PRODUCTS, INC.

515 West Ireland Road

South Bend, Indiana 46614

PRINTED IN U. S. A. 7-74

P/L 522 PART NO. 803871